

I2000M

Operation Manual



Thank you for purchasing an Intrasonic Technology product. Our products are built to provide you with years of high quality sound.

If you need assistance with the installation or operation of this product, please contact our Customer Service Support team at 1-877-435-0670. You may also get information on this and other Intrasonic Technology products on our website at www.intrasonictechnology.com



Table of Contents

Cover	Page 1
Table of Contents	Page 2
Table of Contents (Continued)	Page 3
Safety Instructions	Page 4
Safety Instructions (Continued)	Page 5
Introductions	Page 6
System Over View <ul style="list-style-type: none"> • Master Unit • Room Station • Patio Station • Door Station • Volume Control • Auxiliary Input Wall Plate (Optional) 	Page 7
Operation Controls <ul style="list-style-type: none"> • Integrated Docking Station • Menu/Enter Buttons • Volume Up/Down Buttons • Audio On/Off Button • Up/Down and Left/Right Buttons • Privacy Button • Listen Button • Talk Button • Unlock The Door (Optional) • Remote Control (Optional) 	Page 8
Master Settings <ul style="list-style-type: none"> • Clock • Registry Room • Selecting Door Chime • Door Volume (Chime/Intercom) 	Page 9
Master Settings (Continued) <ul style="list-style-type: none"> • Master Display Brightness • Setting Privacy at Master • Mode (Normal, Music Only, Intercom Only, Monitor, Off) • Setting the Mode for the Master Unit • Changing Input Sources • Switching Between AM and FM Radio 	Page 10
Master Settings (Continued) <ul style="list-style-type: none"> • Selecting a Radio Station at the Master • Setting Radio Presets • Set Bass and Treble • Auto On • Auto Off • Unlock Door from Master (Optional Feature) 	Page 11



Table of Contents

(Continued)

Room and Patio Station Introduction	Page 12
Room and Patio Operation <ul style="list-style-type: none"> • Change Radio Station • Change AM/FM • Scan Preset Radio Stations • Privacy • Backlight • Radio ON/OFF • Change Room Number (for selective call feature with remote) 	Page 13
Room and Patio Station Operation (Continued) <ul style="list-style-type: none"> • Talk • Listen • Source • Hands Free • Unlock Door From Room Station (Optional Feature) 	Page 14
Remote Control Introduction (Optional)	Page 15
Remote Control Operation <ul style="list-style-type: none"> • Talk Button • Selective Call • Door Talk • All Listen • Monitor • Privacy 	Page 16
Remote Control Operation <ul style="list-style-type: none"> • Radio Presets • Clear • Music Volume Up/Down • Intercom Volume • Source • Mute • Unlock The Door 	Page 17
Trouble Shooting Tips and Questions	Page 18
Warranty Information	Page 19



ATTENTION

Safety Instructions

- ! Read these instructions
- ! Keep these instructions
- ! Heed all warnings
- ! Follow all instructions
- ! Do not use this product near water
- ! Clean with dry cloth.
- ! Do not block any ventilation openings, install in accordance with the manufacturer's instructions
- ! Do not install near any heat sources such as radiators, heat registers, stoves, or any other products that produce heat
- ! Only use attachments and accessories specified by the manufacturer.
- ! Do not expose this product to moisture. This can cause shock hazards or create fire and void the warranty
- ! Do not service this product yourself. Attempting to service this product may expose you to high voltage and will void the warranty. Please contact a qualified local dealer for service.
- ! Any substitutions of non-Intrasonic Technology products may result in electrical shock or other hazards and void the warranty
- ! The products should not be exposed to dripping or splashing of liquids. No objects filled with liquids, such as vases, should be placed on the products.

FCC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions; (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures;

- ! Reorient or relocate the receiving antenna.
- ! Increase the separation between the equipment and receiver.
- ! Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- ! Consult with the dealer or an experienced radio technician for help.

Important Safety Instructions

Please read all instructions carefully before installing the **I2000 series** music communication system.

All components of the **I2000 Series** music communication system are permanent connection, and must be installed and disassembled by a qualified installer. Install in accordance with the manufacturer's instructions. And installation must conform to all local building and electrical codes.

Warning:

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that product heat.
9. Only use attachments/accessories specified by the manufacturer.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.




The Lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of instructions in the literature accompanying the product.

Important safety instructions: The apparatus should not be exposed to dripping and splashing and that no objects with liquids, such as vases shall be placed with the apparatus.


Remark: The terminal marked with  is used as earthing terminal. It must be connected to the protective earthing of mains and maintained in use.

is used as earthing terminal. It must be connected to the protective

Introduction

I2000M Master Station

The I2000M is a Music and Intercom system that integrates with today's portable music players, with a modern look that compliments any décor. It's a multi sourced system which allows you to select between three music sources. You can listen to your own home entertainment through the auxiliary input throughout your home. The I2000M not only allows you to use your portable hand held players throughout your home, but offers you the comfort and convenience of communication and room monitoring as well. With features like Automatic Selective Call and a full function remote control, it is convenient to use and offers exceptional value.

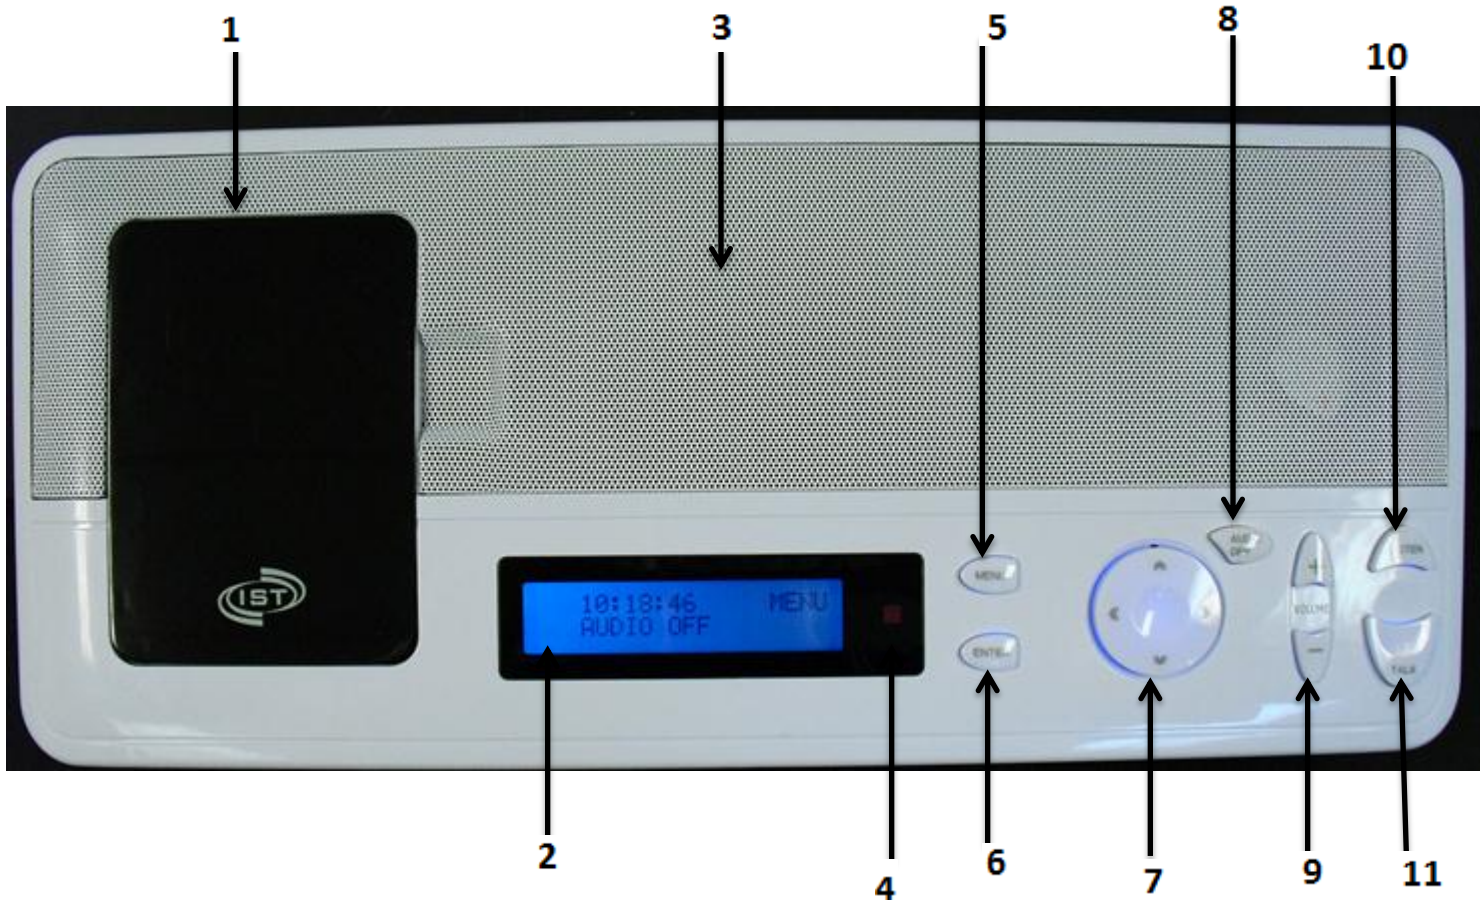

- 1) Integrated Bay for hand held music players
- 2) LDC Display
- 3) Speaker
- 4) Infrared for IREMOTE
- 5) Menu Button
- 6) Enter Button
- 7) Left, Right, Up, Down, Toggle Buttons
- 8) Audio Off/On Button
- 9) Volume Up/Down Button
- 10) Listen Button
- 11) Talk Button



System Overview

Master Unit

The I2000M Master unit allows control of the music and intercom functions. It enables you to set the system music and intercom volume levels, bass and treble levels for the radio, clock settings, privacy settings and more. The integrated docking station allows you to play any portable music source at the master. External 30 watt 8 ohm ceiling and in-wall speakers (optional equipment) can be connected directly off the master station for improved sound quality. The master allows you to play music from the radio, local line source (3.5mm jack) and the auxiliary input wall plate. It is recommended to add only two speaker's maximum to each station wired in series.

I2000M Music Communications System is made up of 6 components.

- Master unit
- Room stations
- Patio stations
- Door stations
- Volume Control
- Auxiliary input wall plate (maximum one per system)

Room Station

The I2000R room station is designed for indoor use. It will provide intercom, radio and input for any portable music source. You can communicate and monitor other stations including the master. Door communications can also be answered from room stations as well as the master and patio. External 30 watt 8 ohm ceiling and in-wall speakers (optional equipment) can be connected directly off any room station for improved sound quality. The room station allows you to play music from the radio, its local line source (3.5mm jack located on the bottom of the room unit) and the auxiliary input wall plate.

Patio Station

The I2000P outside station is weather resistant. It is designed to require some protection from the weather. The patio station allows you to play music from the radio, its local line source (3.5mm jack located on the bottom of the room unit) and the auxiliary input wall plate. The system door chime will sound at the patio station so guests will not be missed.

- **For safety reasons the patio station does not have the unlock feature.**

Door Station

The I2000D door station is designed to require some protection from the weather. It will allow communication with the master, room and patio stations and verify who is there before opening the door. With the optional door release mechanism, the door can be unlocked from any room of the home that has a room station installed.

Volume Control

The I2000VC volume control is designed to allow you to have music in a room with external speakers. The volume control allows you to play music from the radio, the line in source from the master, or the auxiliary wall plate (Optional).

Auxiliary Input Wall Plate (Optional)

The AUXWP wall plate uses an RCA connection for another external source to be available throughout your intercom system. This source can be a CD changer, portable music device or optional radio device.

- ! **Note: There can only be one Auxiliary Input Unit installed per system.**
- ! **The integrated bay LOCAL/BROADCAST switch needs to be on local to use this source at room and patio stations.**



Operation Controls

Integrated Bay

Located on the left side of the master, behind the door, plug in any hand held music device into master docking station by using a 3.5mm plug from the hand held device. The hand held device can also be charged by plugging it into the USB or firewire port provided in the docking station. Most hand held devices will fit inside the docking compartment along with all the cables. Inside the master docking station there is a switch LOCAL/BROADCAST. This is for changing the hand held device music from local (only at the master) to broadcast through the other room and patio units.

- With the changing technology, we cannot guarantee all handheld music players will charge in the USB or firewire port.
- Purchase a BT-Receiver for wireless music streaming.

Menu/Enter Buttons

The Menu/Enter buttons are located just to the right of the LCD display on the master. These keys are multi-functional that are used in conjunction with the LCD display. This allows programming of names, setting time and many more functions.

Volume Up/Down Buttons

The up/down volume buttons control the volume of the master unit.

Audio On/Off Button

The audio on/off feature is used to conveniently turn the system music ON or OFF at all units simultaneously. This does not affect the intercom function.

Up/Down and Left/Right Buttons

These buttons are designed for multi functions such as the following features;

Up/Down Buttons

- Scrolling the menu content
- Changing the AM/FM tuner presets
- Changing characters

Left/Right Buttons

- Moving the display cursor
- Changing the radio frequency

Privacy

The privacy feature will prevent the station from being monitored. This feature is to ensure privacy at the location.

Listen Button

The listen button is used for hands free operation for the receiving side of the call. By pressing and holding the listen button the hands free operation will activate.

Talk Button

The talk button is used to communicate with room, patio and door stations. After the talk button is pressed (this is an all call broadcast) and once the responding station has pressed their talk button within 25 seconds, the selective call feature is activated. This means all stations not on this call will return to the source they were listening to before the first call. When the door bell has been rung push the talk button to talk to the door station.

Unlock the Door (Optional)

The unlock door feature allows you to unlock any door from the master or room unit. Only the door you are in communication with will be unlocked. This optional feature is only available when installed.

- For safety reasons the patio station does not have the unlock feature.

Remote Control (Optional)

The remote control can perform many features including activation of the talk and listen functions. And you can selectively call a room or patio by using the station number or unlock the door when this feature is installed.

MASTER SETTINGS

CLOCK

1. Press the **“Menu”** button
2. Use the up/down arrow buttons on the 4 point star to scroll through the menu until **“SYSTEM”** is displayed
3. Press **“Enter”** and use up/down arrow buttons until **“SET CLOCK”** is displayed and press **“Enter”**
4. The * will be next to the 12H or 24H, use the up/down arrow buttons to select 12 or 24 hour clock
5. Press the left/right arrow buttons to set the * next to the AM or PM mark, use the up/down arrow buttons to select AM or PM
6. Press the left/right arrow buttons to set the * next to the hours, use the up/down buttons to set the hours to the correct time Press the left/right arrow buttons to set the * next to the minutes, use the up/down buttons to set the minutes to the correct time Press **“ENTER”** to exit clock setup
7. Continue to press the **“Menu”** button to get back to the main screen.

REGISTRY ROOM

- Before you can take advantage of all the features that the I2000M offers, you will need to register all units.
 1. Press the **“MENU”** button
 2. Use the up/down arrow buttons on the 4 point star to scroll through the menu until **“System”** is displayed
 3. Press **“ENTER”** and use the up/down arrow buttons until **“Registry”** is displayed
 4. Scroll the registry using the up/down arrow buttons and select **“Reg room”** by pressing **“Enter”**
 5. Press **“Enter”** button again and the system will automatically count the available room stations connected to the system
- Repeat these steps for the patio and door stations
- 6. Continue to press the **“Menu”** button to get back to the main screen when finished.
- ! If no rooms, patios, or doors register refer to trouble shooting on page 19.

SELECTING DOOR CHIME

1. Press the **“Menu”** Button
2. Using the up/down arrow buttons on the 4 point star scroll through the menu until **“DOOR UNIT”** is displayed.
3. Press **“Enter”** and use the up/down arrow buttons to scroll to the door station and select **“Enter”** on the door you want to change.
4. Using the up/down arrows scroll to set ring and press the **“Enter”** button.
5. Using the up/down arrow buttons choose the ring tone and press **“Enter”**.
6. Continue to press the **“Menu”** button to get back to the main screen.

DOOR VOLUME (chime/Intercom)

1. Press the **“Menu”** Button
 2. Using the up/down arrow buttons on the 4 point star scroll through the menu until **“DOOR UNIT”** is displayed
 3. Press **“Enter”** and use the up down arrow buttons to scroll to the door station and select **“Enter”** on the door you want to change the volume on.
 4. Using the up/down arrows scroll to **“Set Vol”** and press **“Enter”**
 5. Using the up/down arrow buttons change the volume level to the desire volume and press **“Enter”**.
 6. Continue to press the **“Menu”** button to get back to the main screen.
- This will only change the intercom volume at the door station
 - Only while the door is ringing or talking can you change the volume for the door chime and/or intercom at the master using the volume buttons.

MASTER SETTINGS

MASTER DISPLAY BRIGHTNESS

1. Press the “**MENU**” button.
2. Press the “**Enter**” button for “**Set up Menu**” “**Master Unit**”
3. Using the up/down arrow buttons on the 4 point star scroll to “**BRIGHTNESS**” and press “**Enter**”
4. Using the up/down arrow buttons choose between OFF, LOW or HIGH brightness
5. Press “**Enter**” on the setting.
6. Continue to press the “**Menu**” button to get back to the main screen.

SETTING PRIVACY AT MASTER

1. Press the “Menu” Button
2. Press the “Enter” button for “Set Up Menu” “Master Unit”
3. Using the up/down arrow buttons on the 4 point star scroll to “Set Privacy” and press “Enter”
4. Using the up/down arrow buttons choose between ON or OFF and press “Enter” on the setting you want.
5. Continue to press the “**Menu**” button to get back to the main screen.
- Selecting ON will enable the privacy mode at the master only

MODE

The mode will tell the master, room or patio what functions to activate. There are six (6) mode settings that may be chosen. Normal mode is considered the standard setup.

1. Normal – Intercom with music
2. Intercom Only – Intercom only with no music
3. Music Only – Music only with no intercom
4. Monitor – Monitor with no music or intercom
5. Monitor (OR) – Monitor override gives the ability to talk into a monitored room
6. Off – This turns off all modes

SETTING THE MODE FOR THE MASTER UNIT

1. Press the “**Menu**” button.
2. Press the “**Enter**” button for “**Set Up Menu**” “**Master Unit**”
3. Using the up/down arrow buttons on the 4 point star scroll to “**Set Mode**” and press “**Enter**”
4. Using the up/down arrow buttons scroll the mode settings and press “**Enter**” for your choice.
5. Continue to press the “**Menu**” button to get back to the main screen.

CHANGING INPUT SOURCES

1. Press the “**Enter**” button for “**SOURCE**”
2. This will display the next available source in the lower right corner of the display
3. Press the “**Enter**” button to select the next available source and repeat until the source desired is displayed on the lower left side of the display

SWITHING BETWEEN AM and FM RADIO

1. Press “**Enter**” button for “**SOURCE**”
2. This will display the next available frequency (AM or FM) in the top right corner of the display Press the “**Menu**” button to select the next available frequency

MASTER SETTINGS

SELECTING A RADIO STATION AT THE MASTER

- Changing a radio station at any location will change the radio station through the whole system.
- Manual Scan
 1. Press left/right arrow buttons for scanning manually
- Auto Scan
 2. Press left/right arrow buttons and hold for two (2) seconds for auto scanning

SETTING RADIO PRESETS

Press left/right arrow buttons until the desired station has been reached Press **“Enter”** to SAVE this station
Select the preset number with the up/down arrow buttons and press **“Enter”**

- The save option for saving a preset is only available for a couple seconds. If **“SAVE”** is not displayed then manual scan to the next radio station and then manual scan back the radio station you want to save and press **“Enter”** before the **“Save”** option goes away.

SET BASS AND TREBLE

1. Press the **“Menu”** button
2. Use the up/down arrow buttons on the 4 point star to scroll through the menu until **“System”** is displayed
3. Press **“ENTER”** and use the up/down arrow buttons until **“Radio Tone”** is displayed and press **“Enter”**
4. Use the up/down arrow buttons and choose **“Set Bass”** or **“Set Treble”** for which one you want to change.
5. Using the up/down arrow buttons change the bass level and press **“Enter”** when you are finished.
6. Continue to press the **“Menu”** button to get back to the main screen.

AUTO ON

1. Press the **“Menu”** button
2. Use the up/down arrow buttons on the 4 point star to scroll through the menu until **“System”** is displayed
3. Press **“ENTER”** and use the up/down arrow buttons until **“Auto”** is displayed and press **“Enter”**
4. Using the up/down arrow buttons until **“AUTO ON”** appears and press **“Enter”**
5. Using the left/right and up/down arrow buttons, set the desired time you want the system to come on.
6. When the correct on time is set press **“ENTER”** button.
7. Scroll the up/down arrow buttons until Auto On appears


AUTO OFF

1. To set the auto off function, start from the last step in Auto On section above **“ENTER”**
2. Using the left/right and up/down arrow buttons, set the desired time you want the system to turn off.
3. When the correct off time is set, press the **“ENTER”** button.

Unlock Door from Master (Optional feature)

- Once the door chime has been activated, UNLOCK DOOR will be on display
- Press the K1 button to unlock the door. It is recommended for safety reasons that you verify who is at the door before using the UNLOCK feature.
- The door will lock automatically. The delay of the auto door locking will depend on.

Room Station

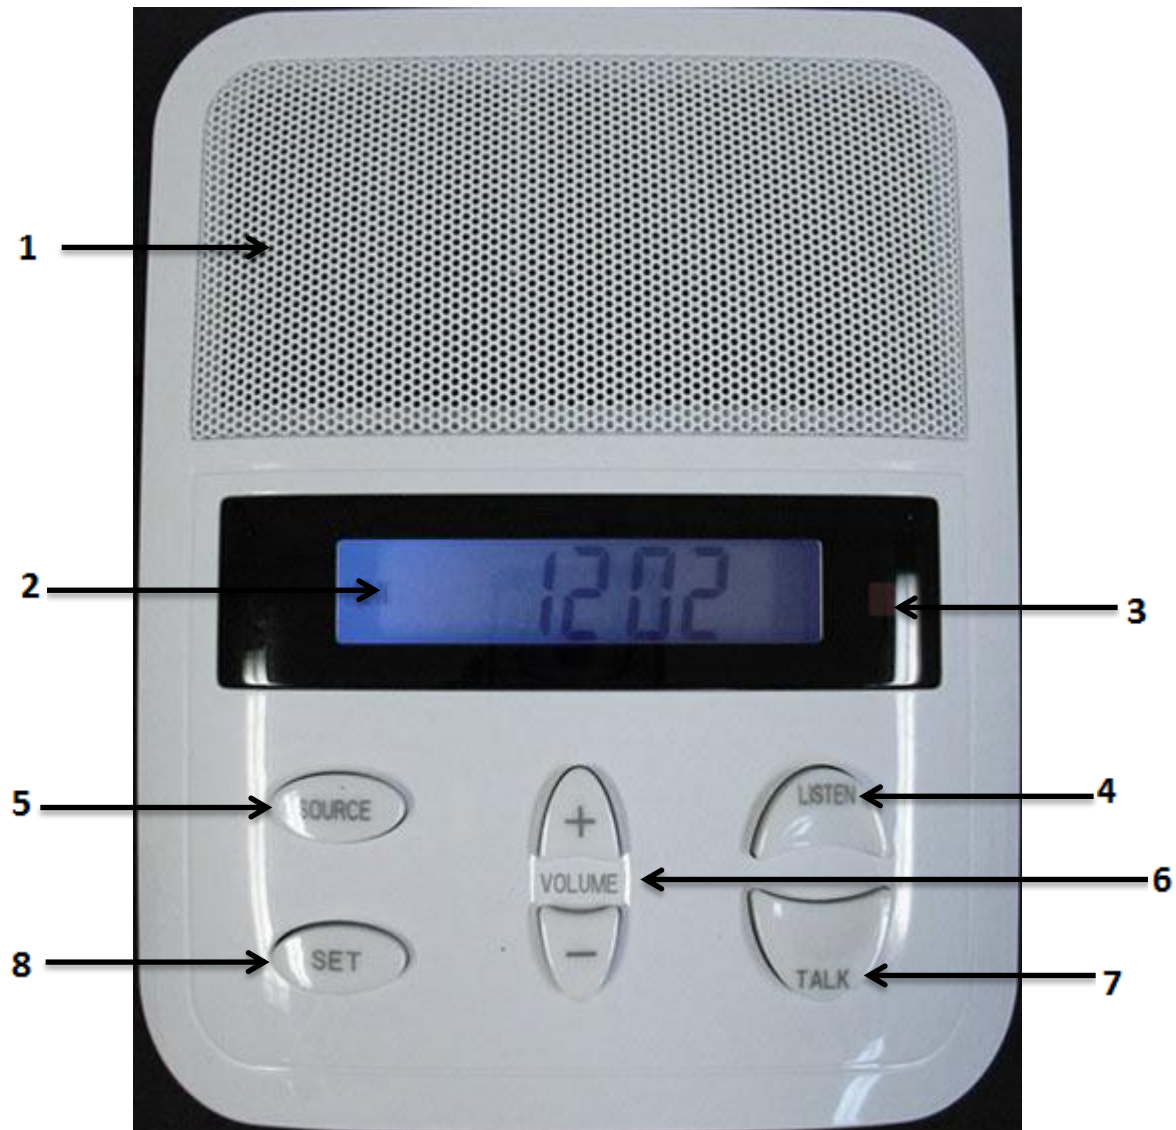

- 1) Speaker
- 2) LCD Display
- 3) Infrared for IREMOTE
- 4) Listen Button
- 5) Source Button
- 6) Volume Up, Down Buttons
- 7) Talk Button
- 8) Set Button



ROOM AND PATIO OPERATION

SET

The set button is a multi-function button that can be used to change radio the radio stations, change the preset stations, turn on/off the privacy feature, change the black light settings, turn on/off the radio, or change the room station number.

Change Radio Station

- Press the set button once to display the current radio station
- Press the set button again until radio station is flashing. The flashing will last for five seconds
- Use the volume up/down buttons to change radio stations
- Press and hold the volume up/down buttons to auto scan radio stations

Change AM/FM

- Press the set button once to display radio station
- Press the set button twice to display AM/FM flashing. The flashing will last for five seconds
- Use the Volume up/down to toggle between AM/FM

Scan Preset Radio Stations

- Press the set button once to display the radio station
- Press the set button once to display preset until flashing. The flashing will last for five seconds
- Use the volume up/down buttons to scan preset radio stations

Privacy

- Press and hold the set button for several seconds until privacy flashes in the left corner of the display
- Use the volume up/down buttons to toggle between on/off
- Press the set button for the choice of on or off
- Press the source button

Backlight

- Press and hold the set button for several seconds until privacy flashes in the left corner of the display
- Press the set button again until the backlight begins to flash
- Use the volume up/down buttons to toggle between HIGH, LOW or OFF
- Press the set button for the choice of HIGH, LOW or OFF
- Press the source button

Radio ON/OFF

- Press and hold the set button until "Aoff" (means off) or "Aon" (means on) is displayed
- Press the set button again and it will change the setting to what is displayed
- The system will automatically cancel if nothing is pushed

Change Room Number

- Press and hold the set button until "AOFF" or "AON" is displayed
- Press the volume up or down until "nbr" is displayed
- Press the set button again and the room number will be displayed
- Press the source button to move number location and press volume up or down to change the number
- Press the set button to save the number



ROOM AND PATIO OPERATION

Talk

- Press the talk button and hold to activate the intercom
- Speak into the speaker in a normal voice and hold the talk button until finished
- Once the intercom call has been answered (within 25 seconds) the system will automatically go into a select call mode (a private conversation between the two rooms) All other rooms will return to the music they were playing before the intercom was activated

Listen

- Press the listen button and hold to activate the listen button
- Every room that is not in privacy mode will be heard from this location
- **The patio station does not have a listen button for security reasons**

SOURCE

This button changes the source for each room separately. There is RADIO, LINE IN and LOCAL to choose between.

- Radio – AM/FM radio is distributed from the master
- Line In – Line in is distributed from the Auxiliary Input Unit (AUXWP) or integrated bay input if master is set to Broadcast
- LOCL – Local input is distributed from the 3.5mm jack located on the bottom of all room and patio stations.


Hands Free

- **This feature allows for a conversation to be hands free for one person**
- Press and hold the listen button to activate the hands free operation. By holding the listen button the second party does not need to press their talk button.
- Hold the listen button until the conversation has ended

Unlock Door from Room Station (optional Feature)

- Once the door chime has been activated the UNLOCK DOOR button (same as SET button) may be used.
- For safety reasons it is recommended that you verify who is at the door before using the UNLOCK feature.
- Press the Set button to unlock the door momentarily
- The door will automatically lock. The delay of the auto door locking will depend on the delay setting programmed in the door release unit, (I2000DR). Contact your installer for more information.
- **For safety reasons the patio station does not have the unlock feature.**

REMOTE CONTROL (Optional)

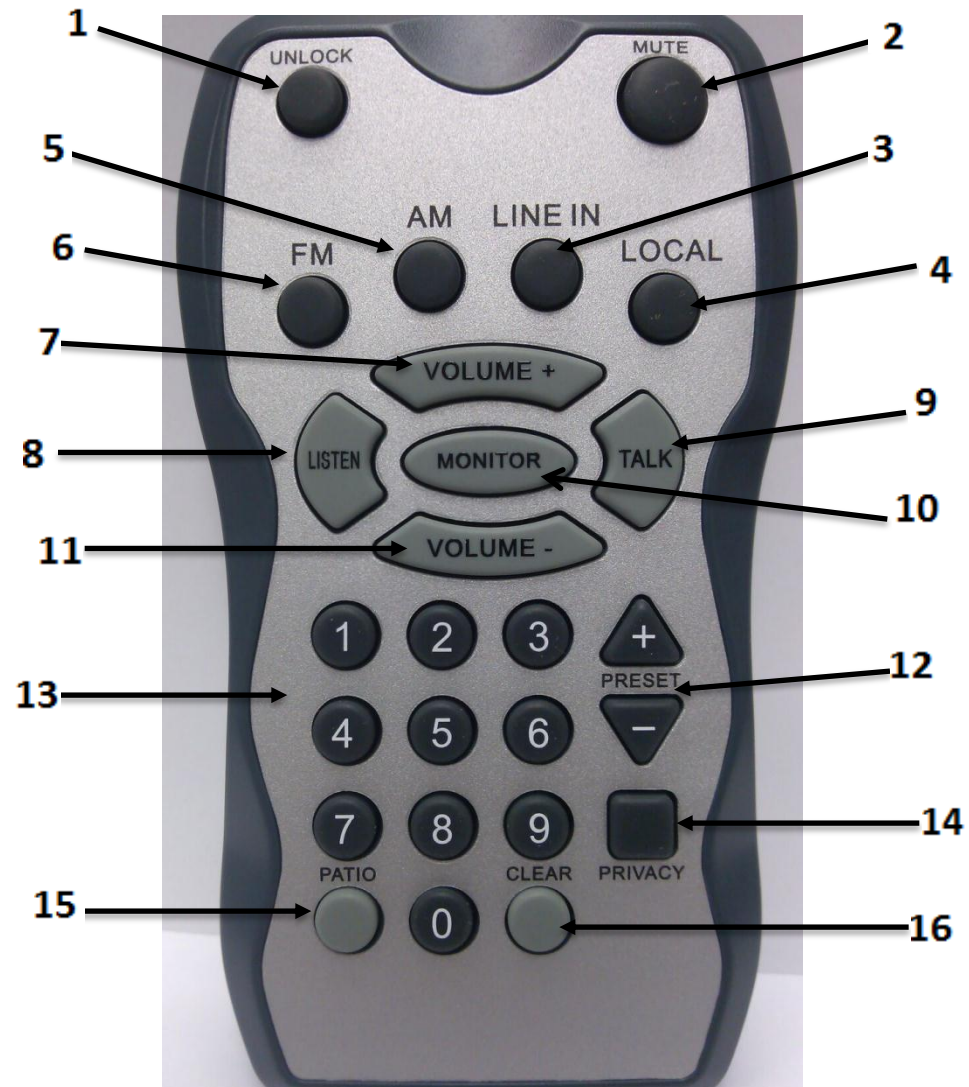

1. Door release button
2. Mute button
3. Line in (source)
4. Local input select
5. AM radio select
6. FM radio select
7. Volume up
8. Listen button
9. Talk button
10. Monitor
11. Volume down
12. Radio preset select
13. Station number select 0-9
14. Privacy
15. Patio
16. Clear



REMOTE CONTROL

(Optional)

Talk Button

- Point the remote at the master, room or patio station. Then press the talk button on the remote to initiate an intercom call to all other stations.
- Press the talk button again to end.
- Once the call has been answered (within 25 seconds) the call will automatically go into the select call mode. All other stations not on this call will go back to the music they were listening to before the call was initiated.

Selective Call

- Point the remote at the master or room station then press the number of the station you want to call and press the talk button to initiate the call. Press talk again when finished talking.
- Once the call has been answered the private communication will be active for 25 seconds.
- To talk to the patio press the patio button, then the patio station number button and then the talk button on the remote. Always end by pressing the talk button when through talking.
- **Program the room and patio numbers before using the selective call feature.**

Door Talk

- Once the door bell has rung, press talk on the remote to activate the door talk and press talk again to activate door listen.
- Press the listen button to cancel this communication

All Listen

- Point the remote at the room station then press the listen button for the all listen feature.
- The listen feature will be active until you press the listen button again.
- If the patio speaker is desired, press the patio button and then the patio station number on the remote and then the listen button. Press listens again when finished.

Monitor

- Point the remote at the room station then press the monitor button for all monitor or select a room station by pressing the number of the room station and then monitor.
- Press the monitor button again to cancel room monitoring.
- If the patio station is desired, press the patio button and then the patio station number on the remote and then press the listen button. Press the listen again when finished.

Privacy

- Point the remote at the room station, master or patio and press the privacy button.
- Press the privacy button again to cancel the privacy mode.



REMOTE CONTROL (Optional)

Radio Presets

- Point the remote at the room station, master or patio and press the preset button + Or – to change the preset radio stations.

Clear

- Point the remote at the room station, master or patio and press the clear button to clear the room number selected

Music Volume UP/Down

- Point the remote at the room station, master or patio and press either the button volume + to raise the music volume or the button volume – to lower the music volume.

Intercom Volume

- Point the remote at the master or room station and press the listen button. Then press the button volume + to raise the intercom volume or the button volume – to lower the intercom button. When finished setting the intercom volume press the listen button again and the room station will return to the pre-selected music.

Source

- Point the remote at the room station and press either the FM, AM, Line In or Local buttons to select the source.

Mute

- Point the remote at the room station and press the mute button to activate the mute feature.
- Press the mute button a second time to cancel the mute function

Unlock the Door

- Once the door bell has been rung, point the remote at the room station. For safety reasons it is recommended that you verify who is at the door before unlocking the door. To unlock the door simply press the unlock button on the remote.
- For safety reasons the patio station does not have the unlock feature.

Trouble Shooting Tips and Questions

Problem or Question	Solution
Cannot hear music at room stations	<p>Volume controls operate independently. Make sure to adjust the volume for each source</p> <p>Check to see if the mode setting at the master is set for intercom only or monitor/off</p>
Cannot hear room intercom	<p>Volume controls operate independently. Make sure to adjust the intercom volume for each station</p> <p>Check to see if the mode settings at the master are set to music only or monitor/off</p> <p>Volume controls operate independently. Make sure to adjust the volume for each room station and source.</p>
Where do I put my hand held music player at the room station?	<p>A hand held music player bracket is sold separately. Contact your installer or Intrasonic Technology for more information</p>
Can I charge my hand held music player?	<p>Only at the master can you charge a hand held music player. This is done via the USB or firewire port in the integrated bay. Note some players may not charge through these ports</p>
Cannot hear the room station being monitored	<p>Volume controls operate independently. Make sure to adjust the intercom volume for each station</p> <p>Make sure privacy control is not active</p>
Where do I plug in my hand held music player at the room station?	<p>At every room and patio station, on the bottom, there is a 3.5mm jack. Simply plug a 3.5mm cable (supplied with Master) into the jack and plug the other end of this cable into the headphone jack on your music device</p> <ul style="list-style-type: none"> ▪ More 3.5mm jack cables can be purchased from your installer.
Cannot hear my hand held music player	<p>Make sure you have LOCL (local) selected as the music source at the station you are attempting to connect your hand held device.</p> <p>Volume controls operate independently. Make sure to adjust the volume for each music source at the station.</p>

Trouble Shooting Tips and Questions (Continued)

<p>How do I monitor a baby's room?</p>	<p>Using the remote control or master, select to room number you wish to monitor and then press monitor. See "MONITOR" under remote control section. Using the remote, press monitor or select room number</p>
<p>What happens if the power goes off?</p>	<p>Like most electronic devices, when the power is off the equipment will not operate. The I2000M has a battery backup that should keep the owner selected settings during most power outages.</p>
<p>Where is the battery backup and how do I replace it?</p>	<p>The battery backup is located behind the master front panel. Simply loosen the three screws on the bottom of the master face plate and pull the face plate off. In the upper right hand corner there is a square cover with a single screw. Remove this screw and remove the battery behind it. Watch the battery polarity and put the new battery in using the same direction as the old battery. The battery number for replacement is CR2032. After replacement remount the master face plate and tighten the 3 screws on the bottom.</p>
<p>I cannot hear my MP3 player or other music source that is plugged into the master docking station throughout the home</p>	<p>The master integrated bay is a local source playing at the master only. To distribute music throughout the entire system, the switch in the integrated bay that says LOCAL/BROADCAST needs to be switched to BROADCAST.</p>
<p>I am getting distorted sound from the MP3 player source</p>	<p>Turn your external device volume all the way up and turn the master volume down until the sound is no longer distorted.</p>
<p>No Rooms Registered</p>	<p>Contact your installer for installation issues. Take the master out of the wall and unplug all the RJ45 ports. Plug in one RJ45 at a time and register them individually. The RJ45's that do not register need the wiring to be double checked and possibly recrimp.</p>



Intrasonic Technology, Inc. 2 Year Limited Warranty

Intrasonic Technology warrants its products to be free of manufacturing defects for two years from the date of closing or actual installation. This warranty only applies to products purchased from authorized dealers or distributors. If proof of installation cannot be supplied, the manufacturing date code may be substituted. The warranty extends to the original user or subsequent owner of the product during the warranty term. Intrasonic Technology will replace or repair the product at its option at no charge with a rebuilt or new product. All products with manufacturing defects must be returned to Intrasonic Technology.

If an Intrasonic Technology product is determined to have a manufacturing defect, please call our toll free number (877-435-0670) before any attempt to dismantle or repair the product. Any attempt to dismantle or repair product will void the warranty.

An RMA (Return Material Authorization) will be required prior to returning a product to Intrasonic Technology. To obtain an RMA number, call our toll free number (877-435-0670) and speak with a customer service representative. All products returned to Intrasonic Technology without an RMA will be refused.

The limited warranty is in lieu of any other warranties, expressed or implied and any other obligations or liability on the seller's part. The limited warranty does not cover service calls, damage caused by improper installation, acts of God or violation of building or electrical codes.

Intrasonic Technology will not be liable for consequential, incidental or other damage arising in connection with use or inability to use this product. In no event shall Intrasonic Technology's liability hereunder exceed the cost of the product covered hereby. No person is authorized to assume for Intrasonic Technology or obligate Intrasonic Technology for any other liability in connection with the sale of this product. Some states do not allow the exclusion or limitation of consequential, incidental damage, so the above limitation or exclusion may not apply. This limited warranty gives you specific legal rights and you may also have other rights, which may vary state to state.