IST VIEW App Setup Manual



Home Security Begins with IST View

Contents

1) Download IST app2	
2) WiFi setting	2
3) Set up New Indoor Monitor	3-6
4) Set up Existing Indoor Monitor	7
5) Others	8-9

1. Download IST app

The IST View app will walk you through setting up and managing all of your security needs. Search for 'IST View' in the Google Play store for Android or the Apple store for iOS.


2. WiFI setting

Note:

- Router Band--This IP indoor monitor will only connect to the 2.4GHZ band. If you have a dual-band router, you must create unique SSID for the 2.4GHZ and 5GHZ bands. Prior to initiating the syncing process, make sure your device is connect to the 2.4GHZ SSID.
- 2). Router b/g/n -- This IP indoor monitor works on 802(b/g/n) network.



2.1 Sign up an account

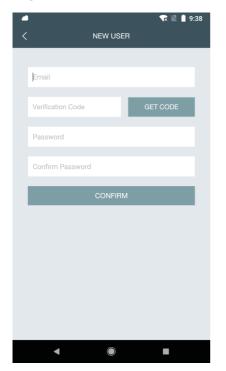


User name is your available email account.

Password requires at least 8 characters and contains an uppercase letter, a lowercase letter, and unsupported special symbol.

3. Set up IP Indoor Monitor

Step 1. Login the IST app

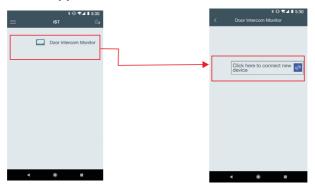

Step 2. Connect your smart-phone to the WiFi which you want the IP indoor monitor to be connected to.

Step 3. Add New Device



New is if the indoor monitor is a new device which hasn't been connected to a router before.

EXISTING is if the indoor monitor has been connected to the current router, please choose "EXISTING".

Step 4. Into AP mode



Note:

3

AP mode is only available for 7-inch indoor monitor.
Into AP mode by manual: Through the menu "System->
Network->Enter AP mode" on the indoor monitor, it will reboot and wait for LED flashing then AP mode ready.

For some models, please refer to the actual user manual to enter into AP mode.


Step 5. Connect to indoor monitor hotspot

- a. For android, it can be connected to the indoor monitor hotspot automatically.
- b. For IOS, you need connect manually.



IOS

Step 6. Connect to WiFi router

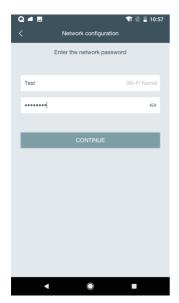

WiFi setup

select the network you want the IP indoor monitor to be connected to.

Step 7. Add the indoor monitor



Name

is the device name for your IP indoor monitor.

Password

is the device password for login your IP indoor monitor. The default password is "888888."





Cloud(Only for the master) is for cloud storage service.




System setting more advance setting.



Delete remove device.

3.1 The icons on live view

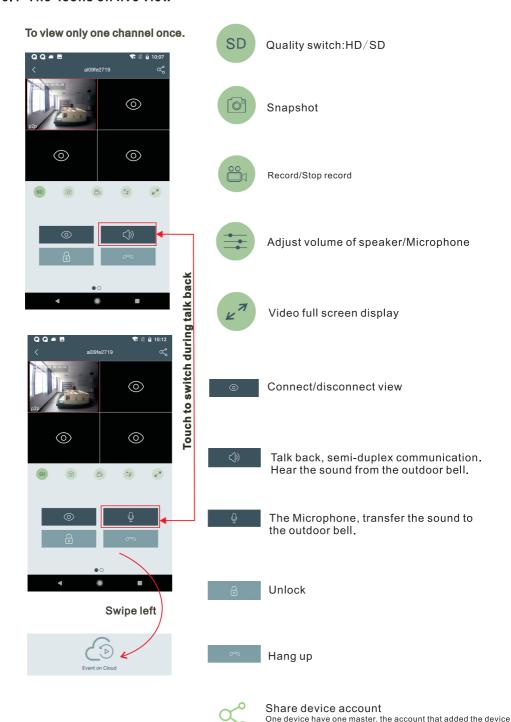

first will be the master, and can share the device to other users.

3.2 Add Existing Device




Name

is the device name for your IP indoor monitor.

Password

is the device password for login your IP indoor monitor.

The default password is "888888."

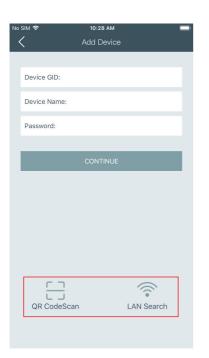

QR Code Scan


for your indoor monitor QR code.

LAN Search


to search online devices in the same WIFI network.

3.3 System Setting

10 Inch Monitor (V510)

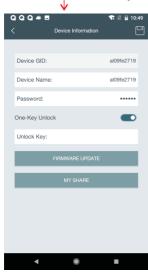

7 Inch Monitor (V500)

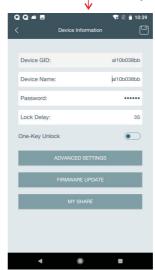

Lock Time

User can adjust unlock time for visitor calling, and values can be set from 1 to 10s.

One-Key Unlock

After turn on this switch, no need enter unlock password every time by visitor press "CALL".

Unlock Key

is the password for unlock.

3.4 Advance setting--For 7 Inch Indoor Monitor (V500 System)



Note: For some 7 inch models, there is no advance setting menu, please check actual model.

Modify Device Password

Modify Unlock Key

Motion Detection

only one channel can enable motion detection alarm function every time.

Set Time

Sync indoor monitor time with your phone.

SD card

For SD card storage

Reboot/Restore

3.5 Push Mode





DND mode

is turn off all devices push function.

Online Mode

is turn on all devices push function. app system default is away mode.

Custom Mode

to optional control device push function.

Note:

For the phone with iOS system, please go into "Settings-> Notification Center->IST" to turn on all the push notifications enabled.

3.6 Account



Media

local storage.

Setting

setup notify mode and screen display mode..

About

app firmware version.